

USERS GUIDE

SW-K80



E-Bike Display

Model: SW-K80

Protocol: UART2.0

Version: V6.03



Scan QR Code
to Download PDF

Changzhou Sciwil E-Mobility Technology Co., Ltd.



Wechat



Website

Contents

I . Safety Notes	3
II . Overview	4
1. Product Name and Model	4
2. Product Introduction	4
3. Specifications	4
4. Function	4
5. Size	5
6. Assembly	5
7. Serial Code	6
III. Operation	6
1. Display Interface	6
1.1 Riding Interface	6
1.2 Setting Interface	6
1.3 Error Interface	7
2. Key Pad	7
3. Key Operation	7
3.1 On/Off	8
3.2 Assist Level	8
3.3 Toggle Displays	8
3.4 Light On/Off	9
3.5 Walk Assist Mode	9
3.6 Dual Drive Control	9
4. Settings	10
5. Error Code	19
6. Connection	19
IV. Warranty	20
V. Version	20

I . Safety Notes

PLEASE TAKE CAUTION WHEN USE, DO NOT PLUG OR UNPLUG THE DISPLAY WHILE YOUR E-BIKE IS POWERED ON.

- AVOID CLASHES OR BUMPS TO THE DISPLAY.

- AVOID USING IN HEAVY RAINS, SNOWS OR LONG EXPOSURE TO STRONG SUNLIGHT. DO NOT TEAR THE WATER-PROOF FILM ON THE SURFACE OF THE SCREEN, OTHERWISE THE WATER-TIGHT PERFORMANCE OF THE PRODUCT MAY BE DEGRADED.

- DO NOT PLUG OR UNPLUG THE DISPLAY WHILE THE SYSTEM IS POWERED ON. UNAUTHORIZED ADJUSTMENT TO DEFAULT SETTINGS IS NOT SUGGESTED, OTHERWISE NORMAL USE OF YOUR E-BIKE CAN NOT BE GUARANTEED.

- WHEN THE DISPLAY PRODUCT DOES NOT WORK PROPERLY, PLEASE SEND IT FOR AUTHORIZED REPAIR IN TIME.

II. Overview

1. Product Name and Model

Product Name: E-Bike Display

Product Model: SW-K80

2. Product Introduction

SW-K80 features high-brightness color LCD and minimalist interface, working as an ideal HMI solution for EN15194 electric bikes.

3. Specifications




- Working Voltage: DC 24V/36V/48V/52V/60V/72V
- Rated Working Current: 12mA
- Leakage current: <1uA
- Screen Size: 4.0" TFT
- Communication Type: UART (by default) / CAN (optional)
- Optional Functions: Bluetooth, NFC
- Working Temperature: -20°C ~ 85°C
- Storage Temperature: -30°C ~ 85°C
- Waterproof Rating: IP66

4. Function

- Boot password
- System unit switch (km/h or mph)
- Assist Level Control and Display
- Battery indication: battery level percentage, low voltage indication
- Speed display: (in km/h or mph)
 - real-time speed (SPEED), max speed (MAX), average speed (AVG)
- Distance: single-trip distance (TRIP), total travel distance (ODO)
- Assist Mode Control and Display (3/5/9 levels)
- Walk assist mode
- Front light indication: front light status supported by controller.
- Error code indication
- Riding Info: Braking Status, Front Light Status, Cruise, Low Voltage.

- Turning Signals: This function works with controller.
- Dual Drive Control and Display: This function works with controller.
- Status of Double Battery Packs: optional, works with controller.
- NFC Function: optional.
- Bluetooth Connection: optional, support OTA upgrade via mobile phone.

5. Size

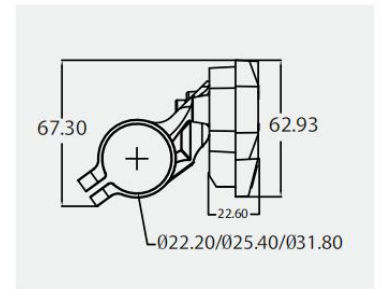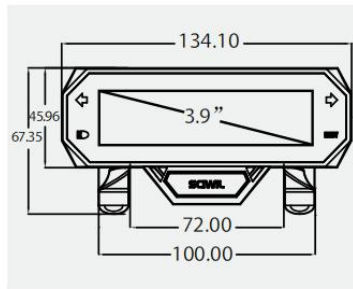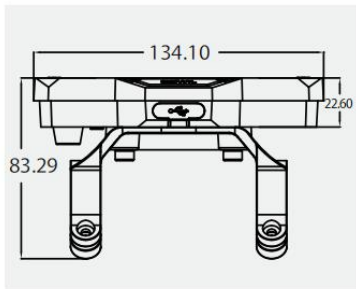

6. Assembly


① Open the holder ring/rubber spacer of the display and fix the display on the handlebar, adjust it to a proper facing angle. Use a M4 Hex Wrench to fix and tighten the screws. Standard fixing torque: **1N·m**.

***Damage due to excessive fixing torque is not covered by warranty.**

② Open the holder ring/rubber spacer of the keypad and fix it on the handlebar, adjust it to a proper facing angle. Use a M3 Hex Wrench to fix and tighten the screws. Standard fixing torque: **1N·m**.

***Damage due to excessive fixing torque is not covered by warranty.**

③ Plug the 5-pin connector of the display to the coupling connector of the Controller.

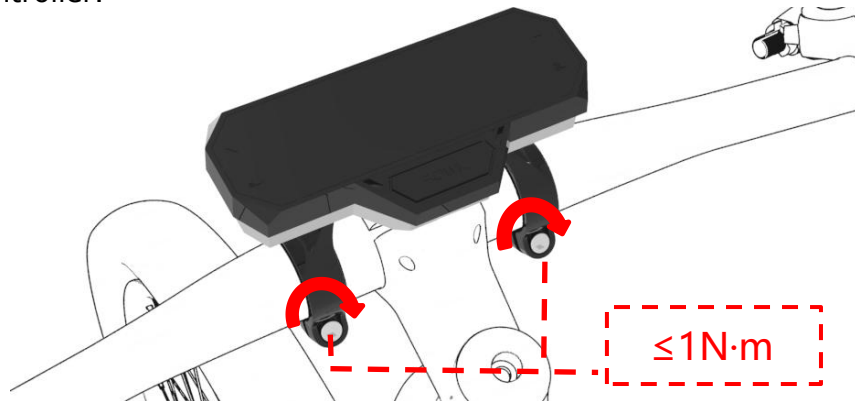

7. Serial Code

Example:

111 22 333333 555 6666

36V

Marked at the
back of display

111: Customer Code

22: Protocol Code

333333: P.O. Date (YYMMDD)


555: Order Receiving Number

6666: Production Date (YYMM)

III. Operation

1. Display Interface

1.1 Riding Interface

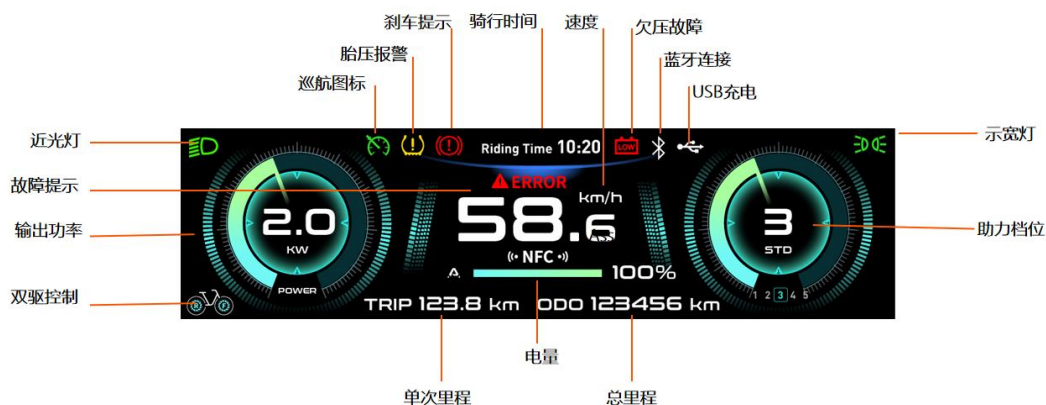

- Status: Real-time Riding Status: Bluetooth, Front Light, Brake, Low Voltage, Turning, Cruise, Drive Status, etc.
- Battery Status: Residual Battery Percentage
- Multi-Function Section: ODO (total range), TRIP (single ride range), MAX (max. speed), AVG (average speed), TIME (riding time), VOL (battery voltage), Wh (motor power), CUR (current), etc.
- Assist Level Mode: 3/5/9 Levels available.

1.2 Setting Interface

Display Settings	MENU	Basic Settings
▶ System Unit	km/h	Auto Lamp OFF
Brightness	IIII	Battery Ind Voltage
Auto-off	OFF	EXIT

In the above interface: Setting Item: System Unit, Parameter Value: km/h

Error Mark

1.3 Error Interface



In the above interface: Error Indicator: ERROR, Error Note: Communications Error

2. Key Pad

SWK2 Keypad Illustration:



There are 5 keys on the SWK2 keypad, in the following instructions:

+ is called Plus Key;

⏻ is called On/Off Key;

↺ is called Minus/Walk Assist Key;

💡 is called Light Key;

i is called Info Key;

3. Key Operation

Key operation guide as follows:

Press and Hold: means press and hold the key(s) for more than 2s.

Press: means press the key(s) for less than 0.5s.

Double Tap: means double tap the key(s) within 0.3s

3.1 On/Off

Turn on the Display: When the display is off, press and hold the On/Off Key to turn on the display, it will show boot interface and then enter riding interface. (If boot password is activated, enter the boot password at start).

Turn off the Display: When the display is on, press and hold the On/Off Key, the display will be turned off. If no operation is engaged for 10min (0km/h), the display will be auto-off. Auto-off time can be set in the Settings.

3.2 Assist Level

Press the Plus Key or Minus/Walk Assist Key to switch assist levels. There are 5 levels by default: 0/1/2/3/4/5. 0 means no assist power.



Level 0




Level 1



Level 2



Level 3

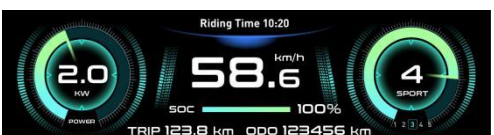

Level 4



Level 5

3.3 Toggle Displays

When the display is on, press the Info Key to toggle among ODO (total range), Trip (single trip range), TIME (riding time) etc.



3.4 Light On/Off

Turn on the Front Light: when the front light is off, press the Light Key to turn it on, and the light icon will be shown on the riding interface (to remove this functions, please reconfigure the controller).

Turn off the Front Light: when the front light is on, press the Light Key to turn it off, and the light icon will be off on the riding interface.



3.5 Walk Assist Mode

Engage Walk Assist Mode: On the riding interface, press and hold the Minus/Walk Assist Key to enter walk assist mode. Hold the Minus/Walk Assist Key to engage walk assist mode, the walk mode icon will be shown on the riding interface, the real-time speed will be shown in the speed section.

Disengage Walk Assist Mode: release the Minus/Walk Assist Key to disengage the walk assist mode, the icon will off on the riding interface.

3.6 Dual Drive Control (enabled by controller)

On the riding interface, press and hold the Plus Key to switch the drive mode, which will be toggled in turn as Rear Drive -> Front Drive -> Dual Drive, and the corresponding wheel of the icon on the down right corner will blink (e.g. the rear wheel of the icon will blink in Rear Drive mode).

4. Settings

4.1 Setting Operations

① **Enter the Settings:** when the display is on, press and hold the Plus Key and the Minus/Walk Assist Key together to enter the Settings.

Available setting items include: system voltage, wheel size (inch), magnetic steel number for speed gauge, speed limit etc (please refer to 4.2 Setting Items).

② **Adjust Settings:** on the Settings interface, press the Plus Key or the Minus/Walk Assist Key to set values for items. The value will blink after change. Press the On/Off Key to save the set value and switch to next item.

③ **Save and Exit Settings:** press and hold again the Plus Key and the Minus/Walk Assist Key together to exit the Settings and save the set value. The system will save and exit automatically if there's no operation for 10s.

4.2 System Unit: km/h or mph

Press Plus or Minus to choose metric (km/h) or imperial (mph) unit.

Display Settings	MENU	Basic Settings
▶ System Unit	km/h	Auto Lamp OFF
Brightness	IIIII	Battery Ind Voltage
Auto-off	OFF	EXIT

Display Settings	MENU	Basic Settings
▶ System Unit	mph	Auto Lamp OFF
Brightness	IIIII	Battery Ind Voltage
Auto-off	OFF	EXIT

4.3 Backlight Brightness

Press Plus or Minus to choose among I~IIIII. I is darkest, IIIII is brightest

Display Settings	MENU	Basic Settings
System Unit	km/h	Auto Lamp OFF
▶ Brightness	I	Battery Ind Voltage
Auto-off	OFF	EXIT

Display Settings	MENU	Basic Settings
System Unit	km/h	Auto Lamp OFF
▶ Brightness	IIIII	Battery Ind Voltage
Auto-off	OFF	EXIT

4.4 Auto-Off

Press Plus or Minus to select 1~60min as auto-off time, which means the display will turn off automatically if no operations detected within this period. Default Auto-Off time: 10min

Display Settings	MENU	Basic Settings
System Unit	km/h	Auto Lamp OFF
Brightness	IIII	Battery Ind Voltage
▶ Auto-off	10min	EXIT

4.5 Auto-Lamp On/Off

Press and hold On/Off Key to turn on or off the front light automatically.

Display Settings	MENU	Basic Settings
System Unit	km/h	▶ Auto Lamp ON
Brightness	IIII	Battery Ind Voltage
Auto-off	OFF	EXIT

Digital scenario or analog scenario switch. * The current version only supports digital scenario

4.6 Battery Indication

Press Plus or Minus to select among Voltage/Percentage/Off. Battery Indicator on the display will toggle among voltage value, battery percentage left and none.

* Battery percentage display requires system-BMS communications.

Display Settings	MENU	Basic Settings
System Unit	km/h	Auto Lamp OFF
Brightness	IIII	▶ Battery Ind Voltage
Auto-off	OFF	EXIT

Display Settings	MENU	Basic Settings
System Unit	km/h	Auto Lamp OFF
Brightness	IIII	▶ Battery Ind Percent
Auto-off	OFF	EXIT

Display Settings	MENU	Basic Settings
System Unit	km/h	Auto Lamp OFF
Brightness	IIII	▶ Battery Ind OFF
Auto-off	OFF	EXIT

4.7 Wheel Size

Press Plus or Minus to set the correct wheel size. Default wheel size: 26inch. Incorrect or inaccurate wheel size may lead to incorrect speed display. Unit: inch, increment 0.1inch.

Display Settings	MENU	Basic Settings
▶ Wheel	12inch	Rider's Weight (kg) >
Battery	36V	Password Settings >
Low Battery	30.0V	Advanced Settings >

4.8 Voltage Level

Press Plus or Minus to select. Working voltage range: 24~72V.

Display Settings	MENU	Basic Settings
Wheel	12inch	Rider's Weight (kg) >
▶ Battery	36V	Password Settings >
Low Battery	30.0V	Advanced Settings >

Display Settings	MENU	Basic Settings
Wheel	12inch	Rider's Weight (kg) >
▶ Battery	48V	Password Settings >
Low Battery	30.0V	Advanced Settings >

4.9 Low Battery Level

In light of low battery protection volt level, press Plus or Minus to set low battery protection level for the vehicle.

Display Settings	MENU	Basic Settings
Wheel	12inch	Rider's Weight (kg) >
Battery	36V	Password Settings >
▶ Low Battery	23.4V	Advanced Settings >

Display Settings	MENU	Basic Settings
Wheel	12inch	Rider's Weight (kg) >
Battery	36V	Password Settings >
▶ Low Battery	30.0V	Advanced Settings >

4.10 Rider's Weight

Press On/Off Key to enter weight input interface. Press the Plus or Minus to Adjust value. This data is for calorie burning calculation.

Display Settings	MENU	Basic Settings
Wheel	12inch	Rider's Weight (kg) >
Battery	36V	Password Settings >
Low Battery	30.0V	Advanced Settings >

Rider's Weight (kg)	
BACK	
▶ Input Rider's Weight (kg)	

Rider's Weight (kg)	
BACK	
▶ Input Rider's Weight (kg)	
0	65

4.11 Boot Password

Press the Info Key to enter Password Settings. First to set is 4-digit boot password (as shown in the pictures below). Then you can set in turn passwords for setting menu, basic settings, advanced settings and change password.

Display Settings	MENU	Basic Settings
Wheel	12inch	Rider's Weight (kg) >
Battery	36V	▶ Password Settings >
Low Battery	30.0V	Advanced Settings >

Password Settings	
▶ Boot Password >	ADV Settings Password No
Setting Menu Password YES	Set Your Password >
Base Menu Password No	BACK

Password Settings	
Boot Password >	ADV Settings Password No
Setting Menu Password YES	▶ Set Your Password >
Base Menu Password No	BACK

Password Settings	
BACK	
▶ Input Password	

Password Settings	
BACK	
▶ Input Password	
0	000

4.12 Advanced Settings

Press On/Off Key to enter Advanced Settings. For password protected product, enter the correct password and press On/Off Key to enter Advanced Setting. Press Plus or Minus to set values, then press On/Off Key to save and switch to the next item.

Display Settings	MENU	Basic Settings
Wheel	12inch	Rider's Weight (kg) >
Battery	36V	Password Settings >
Low Battery	30.0V	▶ Advanced Settings >



4.13 Speed Limit

Press Plus or Minus to set values for speed limit. Min. Value: 10km/h, Max. Value: 100km/h, increment: 1km/h. Default speed limit: 100km/h.

Advanced Settings			
▶ Speed limit	25km/h	Assist levels	5
Current limit	15A	Torque level range	500mV
Auto Cruise	No	Poles in motor	46

Advanced Settings			
▶ Speed limit	45km/h	Assist levels	5
Current limit	15A	Torque level range	500mV
Auto Cruise	No	Poles in motor	46

4.14 Current Limit

Press Plus or Minus to set values for current limit. Min. Value: 6A, Max. Value: 50A. Default speed limit: 15A.

Advanced Settings			
Speed limit	10km/h	Assist levels	5
▶ Current limit	15A	Torque level range	500mV
Auto Cruise	No	Poles in motor	46

4.15 Auto-Cruise

Press Plus or Minus to turn on or off the auto-cruise function.

Advanced Settings			
Speed limit	10km/h	Assist levels	5
Current limit	6A	Torque level range	500mV
▶ Auto Cruise	No	Poles in motor	46

Advanced Settings			
Speed limit	10km/h	Assist levels	5
Current limit	6A	Torque level range	500mV
▶ Auto Cruise	Yes	Poles in motor	46

4.16 Assist Levels

Press Plus or Minus to select assist level mode: 3 levels / 5 levels.

Advanced Settings			
Speed limit	10km/h	▶ Assist levels	3
Current limit	6A	Torque level range	500mV
Auto Cruise	No	Poles in motor	46

Advanced Settings			
Speed limit	10km/h	▶ Assist levels	5
Current limit	6A	Torque level range	500mV
Auto Cruise	No	Poles in motor	46

4.17 Torque Level Range

Press Plus or Minus to select signal voltage level for torque sensor:
500mV / 3500mV.

Advanced Settings			
Speed limit	10km/h	Assist levels	3
Current limit	6A	▶ Torque level range	500mV
Auto Cruise	No	Poles in motor	46

4.18 Poles in Motor

Press Plus or Minus to set number of magnetic poles for speed gauge.
Min. Value: 1, Max. Value: 255. Default poles number: 1.

Advanced Settings			
Speed limit	10km/h	Assist levels	3
Current limit	6A	Torque level range	500mV
Auto Cruise	No	▶ Poles in motor	46

4.19 Start Mode

Press Plus or Minus to select start mode : Throttle on demand and Throttle after pedal. "Zero" means Throttle on demand, "Non-Zero" means Throttle after pedal.

Advanced Settings			
▶ Start mode	Zero	Start Sensitivity	2
Drive mode	2	Start Strength	3
PAS Disc	5	EXIT	

Advanced Settings			
▶ Start mode	Non Zero	Start Sensitivity	2
Drive mode	2	Start Strength	3
PAS Disc	5	EXIT	

4.20 Drive Mode

Press Plus or Minus to select drive mode: 0 / 1 / 2. 0 means pedal assist only, 1 means throttle only, 2 means both modes available.

Advanced Settings			
Start mode	Zero	Start Sensitivity	2
▶ Drive mode	2	Start Strength	3
PAS Disc	5	EXIT	

Advanced Settings			
Start mode	Zero	Start Sensitivity	2
▶ Drive mode	1	Start Strength	3
PAS Disc	5	EXIT	

Advanced Settings			
Start mode	Zero	Start Sensitivity	2
▶ Drive mode	0	Start Strength	3
PAS Disc	5	EXIT	

4.21 PAS Sensor Type

Press Plus or Minus to select PAS Sensor Type: 5 / 8 / 12. This value is the number of magnetic steels on the PAS disc.

Advanced Settings			
Start mode	Zero	Start Sensitivity	2
Drive mode	0	Start Strength	3
▶ PAS Disc	8	EXIT	

Advanced Settings			
Start mode	Zero	Start Sensitivity	2
Drive mode	0	Start Strength	3
▶ PAS Disc	5	EXIT	

Advanced Settings			
Start mode	Zero	Start Sensitivity	2
Drive mode	0	Start Strength	3
▶ PAS Disc	12	EXIT	

4.22 Start Sensitivity

Press Plus or Minus to select start sensitivity range: 1~24. This value is the start latency after pedal.

Advanced Settings			
Start mode	Zero	▶ Start Sensitivity	1
Drive mode	0	Start Strength	3
PAS Disc	5	EXIT	

4.23 Start Strength

Press Plus or Minus to select start sensitivity range: 0~5. This value is the start power output after pedal.

Advanced Settings			
Start mode	Zero	Start Sensitivity	0
Drive mode	0	▶ Start Strength	1
PAS Disc	5	EXIT	

4.24 Factory Reset

Press the On/Off key to enter the Factory Reset Interface. Select YES to reset to factory setting, select Exit to return to the previous menu.

Display Settings		MENU	Basic Settings
Factory Settings	>	▶ Information	
EXIT			

Factory Settings	
YES	
▶ ODO	67.5 km
BACK	

4.25 Information

Press the On/Off key to enter the information interface and check info like speed record, distance record and serial numbers, etc.

Advanced Settings			
Start mode	Zero	▶ Start Sensitivity	0
Drive mode	0	Start Strength	3
PAS Disc	5	EXIT	

Information			
MAX Speed	82.8 km/h	▶ ODO	82.8 km
AVG Speed	55.8 km/h	Product Info	>
TRIP	74.1 km	Battery Info	>

Information			
MAX Speed	82.8 km/h	ODO	82.8 km
AVG Speed	55.8 km/h	▶ Product Info	>
TRIP	74.1 km	Battery Info	>

Product Info			
Version	H1.0	▶ BACK	
Date	2023 - 03 - 05		
Serial NO	SWC - K80 - 13		

Information			
MAX Speed	82.8 km/h	ODO	82.8 km
AVG Speed	55.8 km/h	Product Info	>
TRIP	74.1 km	▶ Battery Info	>

Battery Info			
Voltage	38.9V	▶ Health	...
Capacity	0%	Temperature	...
Cycle Times	...	Remaining Capacity	...mAh




Battery Info			
Full Charge Capacity	...mAh		
▶ BACK			

Information			
▶ BACK			

5. Error Code

Error Code (decimal)	Status	Note
E00	Normal	
E01	Reserved	
E02	Brake Error	
E03	PAS Sensor Error (Riding Mark)	Not Realized
E04	Walk Assist Mode	
E05	Real-Time Cruise	
E06	Low Voltage Protection	
E07	Motor Error	
E08	Throttle Error	
E09	Controller Error	
E10	Communications Error	
E12	BMS Communications Error	
E13	Front Light Error	

6. Connection

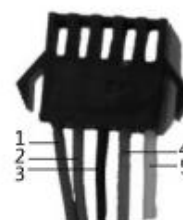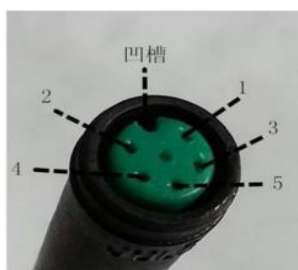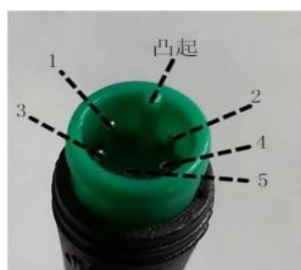

Display to Controller Controller to Display Controller Connector

Pin No.	Wire Color	Functions
1	Red (VCC)	Display Power Wire
2	Blue (K)	Electric Lock Wire
3	Black (GND)	Display Ground Wire
4	Green (RX)	Display Data Receiving Wire
5	Yellow (TX)	Display Data Sending Wire

Extended Functions- Front Light:

Brown (DD): The power wire (+) of the light

White (GND): The ground wire (≡) of the light.

Note: Wire sequences of water-proof connectors are concealed.

IV. Warranty

In compliance with local laws, Sciwil provides limited warranty period covering **24 months** after the date of manufacturing (as indicated by the serial number), applies to quality issues during normal operations.

The limited warranty shall not be transferred to a third party other than as specified in the agreement with Sciwil.

Warranty Exclusions:

- Sciwil products that have been opened, modified or repaired without authorization.
- Damage on the connectors.
- Damage to the surface after leaving factory, including shell, screen, buttons, or other appearance parts.
- Damage to wiring and cables after leaving factory, including breaks and exterior scratch.
- Damage or loss due to force majeure (e.g. fire or earthquake) or natural disaster (e.g. lightening).
- Out of the warranty period.

V. Version

This display user manual is in compliance with the general software version (A/0) of Changzhou Sciwil E-Mobility Technology Co., Ltd. There are chances that display products on some e-bikes may have a different software version, which is subject to the actual version in use.